


DIAGRAM OF POWER INSTALLATION AND CONNECTIONS ON 09/12 13 SEER AIR-CON UNITS 110volts

BREAKER OR PULL OUT

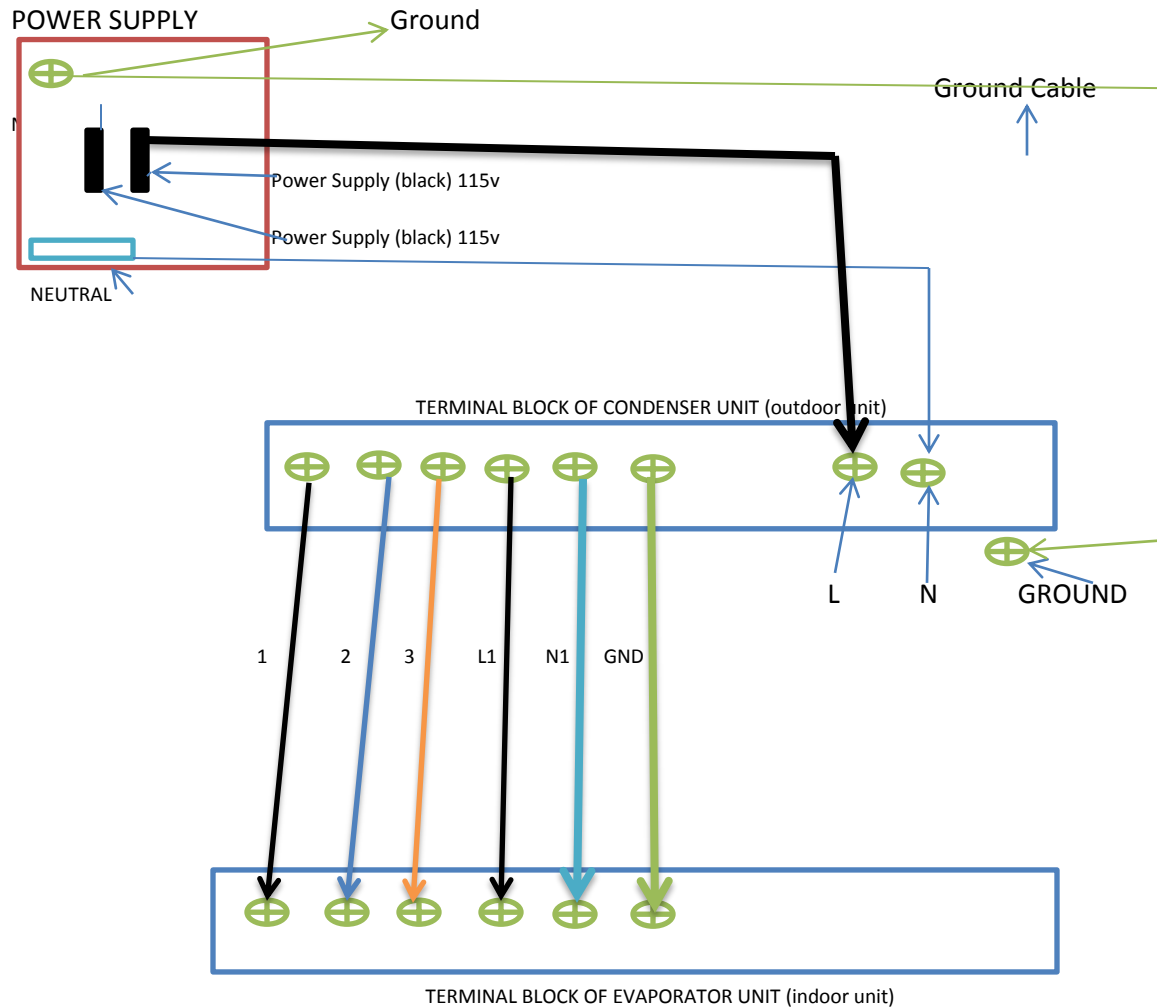

ALL THE CABLES FROM THE TERMINAL BLOCK OF THE CONDENSING UNIT SHOULD BE THE SAME COLOR TO THE EVAPORATOR TERMINAL.

EXAMPLE:

CONDENSING UNIT TERMINAL 1 TO EVAPORATOR UNIT TERMINAL 1 BLACK

CONDENSING UNIT TERMINAL 2 TO EVAPORATOR UNIT TERMINAL 2 BLUEAND SO ON.

EVERYTIME YOU SHOULD MAKE SHURE THAT THE COLOR CODED CABLES ARE IN FACT FROM ONE TERMINAL TO THE OTHER IN THE SAME NUMBER AND WITH THE SAME COLOR. FAILING TO COMPLY WITH THIS YOU COULD FINISH WITH A MALFUNCTIONING UNIT OR BURN A CIRCUIT BOARD. IF THAT HAPPEN YOUR SISTEM WARRANTY IS VOIDED.

ALWAYS FOLLOW YOUR LOCAL ELECTRICAL WIRING CODES AND DO IT WITH A CERTIFIED TECHNICIAN.